

Pattern Information

Date 16-maalis-23
 Pattern Type
 Pattern Difficulty
 Pattern Designer
 Pattern Volume (ml) 21,51

Surface Information

Surface Type Synthetic
 Surface Brand
 Age

Pattern Parameters

Pattern Number
 Pattern Name Carbo kevät 2025
 Mode Clean & Oil
 Forward Speed Quick Clean
 Start Cleaner Spray 0
 Start Squeegee 0
 Start Oiling 6
 Split Pattern


Supplies Information

Lane Cleaner Judge
 Cleaner Mixture Ratio 6 : 1
 Cleaner Transition Distance Authority22
 Cleaner Spray End Distance 52 Envoy
 Lane Conditioner Hp 309 hv

Notes

Zone	1	2	3	4	5	6	7	8
Zone End Distance	10	17	25	35	41			
Zone Ratio L	6,4 : 1	11,4 : 1	8,5 : 1	7,1 : 1	### : 1	### : 1	### : 1	### : 1
Zone Ratio R	6,4 : 1	11,4 : 1	8,5 : 1	7,1 : 1	### : 1	### : 1	### : 1	### : 1
Zone Volume (ml)	11,02	4,79	3,35	2,35	0,00	0,00	0,00	0,00

ZONE	7 Pin Side														Board Number										10 Pin Side														
	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13	L14	L15	L16	L17	L18	L19	C20	R19	R18	R17	R16	R15	R14	R13	R12	R11	R10	R9	R8	R7	R6	R5	R4	R3	R2	R1
1	0	7	7	7	7	7	50	80	100	100	100	100	100	100	100	100	100	100	100	100	100	100	100	100	100	100	100	100	100	100	80	50	7	7	7	7	7	7	0
2	0	7	7	7	7	7	7	7	7	20	60	80	80	80	80	80	80	80	80	80	80	80	80	80	80	80	80	80	60	20	7	7	7	7	7	7	7	7	0
3	0	7	7	7	7	7	7	7	7	7	7	15	25	60	60	60	60	60	60	60	60	60	60	60	60	25	15	7	7	7	7	7	7	7	7	7	7	0	
4	0	0	0	7	7	7	7	7	7	7	7	7	7	10	20	40	40	40	40	40	40	40	40	40	20	10	7	7	7	7	7	7	7	7	7	0	0	0	
5	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	
6																																							
7																																							
8																																							

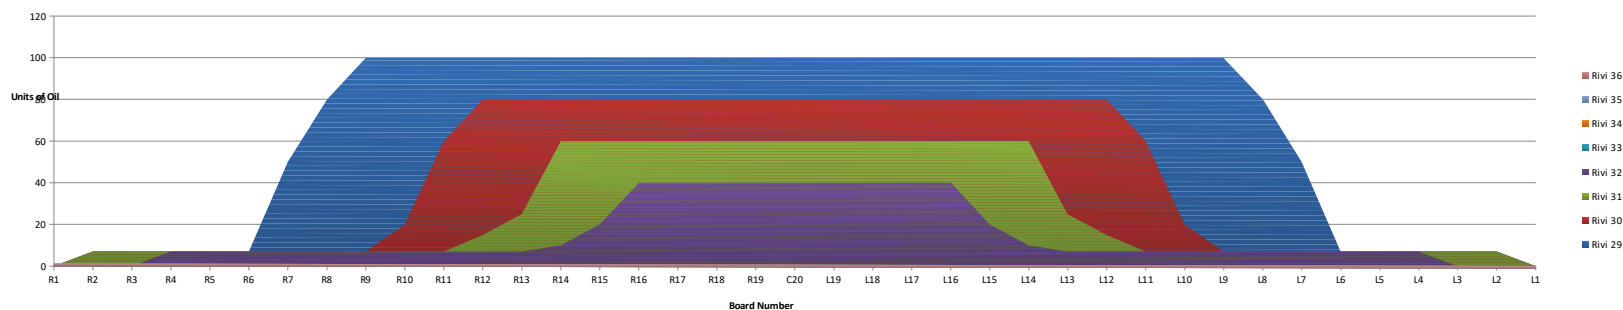

Carbo kevät 2025

Crosswise Ratios (by units)

Zone 1			
	Average	Ratio	
3L-7L Left =	15,6	6,4	
3R-7R Right=	15,6	6,4	
18L-18R Center =	100,0		
Zone 2			
	Average	Ratio	
3L-7L Left =	7,0	11,4	
3R-7R Right=	7,0	11,4	
18L-18R Center=	80,0		
Zone 3			
	Average	Ratio	
3L-7L Left =	7,0	8,5	
3R-7R Right=	7,0	8,5	
18L-18R Center=	60,0		
Zone 4			
	Average	Ratio	
3L-7L Left =	5,6	7,1	
3R-7R Right=	5,6	7,1	
18L-18R Center =	40,0		


Zone 5			
	Average	Ratio	
3L-7L Left =	0,0	#JAKO/0!	
3R-7R Right=	0,0	#JAKO/0!	
18L-18R Center=	0,0		
Zone 6			
	Average	Ratio	
3L-7L Left =	#JAKO/0!	#JAKO/0!	
3R-7R Right=	#JAKO/0!	#JAKO/0!	
18L-18R Center=	#JAKO/0!		
Zone 7			
	Average	Ratio	
3L-7L Left =	#JAKO/0!	#JAKO/0!	
3R-7R Right=	#JAKO/0!	#JAKO/0!	
18L-18R Center =	#JAKO/0!		
Zone 8			
	Average	Ratio	
3L-7L Left =	#JAKO/0!	#JAKO/0!	
3R-7R Right=	#JAKO/0!	#JAKO/0!	
18L-18R Center=	#JAKO/0!		

Crosswise Ratios (by ml)

Zone 1			
	Average	Ratio	
3L-7L Left =	0,065	6,4	
3R-7R Right=	0,065	6,4	
18L-18R Center =	0,419		
Zone 2			
	Average	Ratio	
3L-7L Left =	0,021	11,4	
3R-7R Right=	0,021	11,4	
18L-18R Center=	0,235		
Zone 3			
	Average	Ratio	
3L-7L Left =	0,023	8,5	
3R-7R Right=	0,023	8,5	
18L-18R Center=	0,201		
Zone 4			
	Average	Ratio	
3L-7L Left =	0,023	7,1	
3R-7R Right=	0,023	7,1	
18L-18R Center =	0,168		

Zone 5			
	Average	Ratio	
3L-7L Left =	0,000	#JAKO/0!	
3R-7R Right=	0,000	#JAKO/0!	
18L-18R Center=	0,000		
Zone 6			
	Average	Ratio	
3L-7L Left =	0,000	#JAKO/0!	
3R-7R Right=	0,000	#JAKO/0!	
18L-18R Center=	0,000		
Zone 7			
	Average	Ratio	
3L-7L Left =	0,000	#JAKO/0!	
3R-7R Right=	0,000	#JAKO/0!	
18L-18R Center =	0,000		
Zone 8			
	Average	Ratio	
3L-7L Left =	0,000	#JAKO/0!	
3R-7R Right=	0,000	#JAKO/0!	
18L-18R Center=	0,000		

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

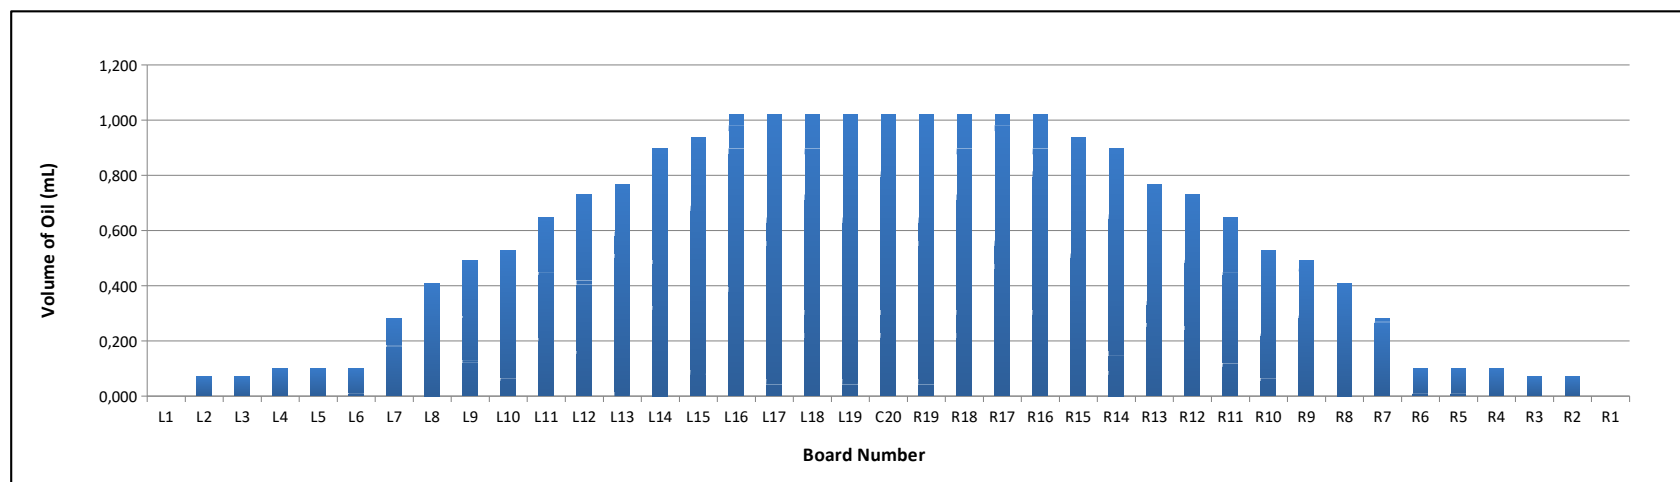



3L-7L 18L-18R 3R-7R

	Left	Center	Right
Zone 2	2,2	1,2	2,2
Zone 3	2,2	1,6	2,2
Zone 4	2,7	2,5	2,7
Zone 5	###	###	###
Zone 6	###	###	###
Zone 7	###	###	###
Zone 8	###	###	###

Carbo kevät 2025

Lengthwise Ratio By Board (units & ml)

[illegible]